



INSTALLATION INSTRUCTIONS

Allora USA undermount sinks


Applicable Models: All KSN and KH models including their ADA counterparts

ATTENTION, REVIEW BEFORE INSTALLATION:

- **ALLORA USA RECOMMENDS THAT UNDERMOUNT SINKS SHOULD BE INSTALLED BY A PROFESSIONAL EXPERIENCED INSTALLER.**
- **ALLORA USA IS NOT RESPONSIBLE FOR SINK OR COUNTERTOP IF DAMAGED DURING INSTALLATION.**
- **ALLORA USA IS NOT RESPONSIBLE FOR ANY DAMAGES DUE TO IMPROPER INSTALLATION.**
- **INSPECT SINK FOR DAMAGE PRIOR TO BEGINNING INSTALLATION.**
- **UNDERMOUNT SINKS SHOULD ONLY BE FASTENED TO A SOLID SURFACE COUNTERTOP (I.E. GRANITE/QUARTZ/CORIAN®/SILESTONE®).**
- **METAL EDGES MAY BE SHARP - USE CAUTION WHEN HANDLING.**
- **FOLLOW ALL LOCAL PLUMBING AND BUILDING CODES.**

An undermount sink can be installed in three different fashions. It is recommended that you discuss this with your customer and agree that this finished appearance is the desired effect. Allora USA is not responsible for improper sink or countertop installations. Due to the aesthetic qualities of the converging bowl radii, the template furnished with each sink provides the only opening recommended for installation of undermount sinks.

See illustrations below:

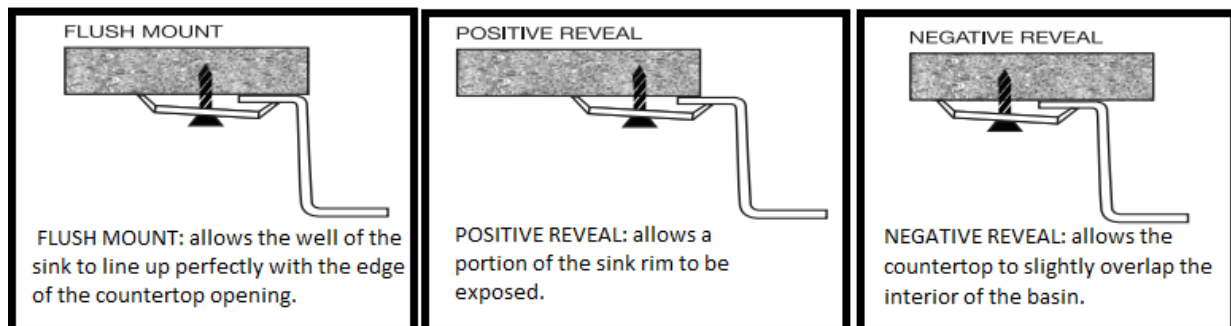



INSTALLATION INSTRUCTIONS

Allora USA undermount sinks

Applicable Models: All KSN and KH models including their ADA counterparts

1. Using the template provided, measure and cut the hole in the countertop.
2. Determine the locations for the clip brackets around the perimeter of the sink.
3. Pre-drill holes for the clips using appropriate methods for the countertop material.
4. With denatured alcohol, clean the surfaces of the sink and countertop which will meet.
5. Evenly apply a bead of silicone along perimeter edge of the opening on the underside of the countertop. Carefully align the sink under the countertop opening.
6. Evenly apply pressure to the sink securing a seal of the silicone against the countertop.
7. Re-check that the sink is evenly aligned with the countertop.
8. Attach and tighten the clip brackets against the edge of the sink. Do not tighten one screw completely before others.
9. Partially tighten one clip then the one across from it, and so on until all clips are fully tightened. This will safeguard against an uneven or insecure installation.
10. Remove any excess silicone along the sink lip under the countertop.
11. Use a cloth with denatured alcohol along the inner perimeter of the sink and top of counter to remove any excess sealant.